WHEEL WEIGHT APPLICATION GUIDE
FOR OEM ALLOY WHEELS

EXPERT'S ADVICE

Balanced tires:
- *Help save fuel*
- *Preserve tire life*
- *Improve safety*
- *Improve comfort*


ONLINE VIEWING 2025

NOTE: Modern OEM wheels may only have a flange on one side, or are flangeless. In this case use an adhesive wheel weight.

	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025
Acura	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Audi	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
BMW	IAW	IAW	IAW	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
Buick	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Cadillac (Passenger Cars)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Cadillac (Trucks / SUVs)	MC / T	MC / T	MC / T	MC / T	MC / T	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Chevrolet (Passenger Cars)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Chevrolet (Trucks / SUVs)	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC	MC	MC	MC
Chrysler (All Vehicles)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Dodge & Ram	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Fiat	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Ford (MOST Vehicles)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Ford (SOME Vehicles)	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
GMC (Passenger Cars)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
GMC (Trucks / SUVs)	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC / T	MC	MC	MC	MC
Honda	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Hyundai (MOST Vehicles)	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Hyundai (SOME Vehicles)	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Infiniti	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Jaguar	IAW	IAW	IAW	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
Jeep	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC	MC
Kia	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Land Rover	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Lexus	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Lincoln	MC	MC	MC	MC	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Mazda (MOST Vehicles)	MC	MC	MC	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Mazda (SOME Vehicles)	FN	FN	FN	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Mercedes-Benz (All)	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
Mini	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Mitsubishi	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
Nissan	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Porsche	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
Scion	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	Adhesive	Adhesive	Adhesive	Adhesive
Smart	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	Adhesive	Adhesive	Adhesive	Adhesive
Subaru	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Toyota	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN	FN
Volkswagen	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive	Adhesive
Volvo	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW	IAW
	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025

Clip Profiles

Alloy Wheels

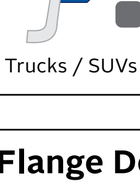

MC
Primarily American



FN
Primarily Asian



IAW
Mixture of Makes

Steel Wheels




P
Passenger Cars



T
Trucks / SUVs / Vans

Flange Depth

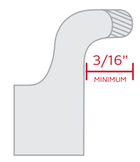

Some wheels feature rim flanges that are not intended for clip-on wheel weights and are only added for decoration purposes. All rim flanges that are less than 3/16" deep should utilize an adhesive wheel balance weight.

Other Notes:

- Always check brake calliper clearance to the wheel weight with a minimum of 1/8"
- Using the wrong weight can impair brake operation, steering or result in damage to vehicle.
- Applications provided in this guide are for reference only and may not be exhaustive or apply to all make and model options
- All application information is subject to change without notice
- Wheel balance weights should always be installed by a professional technician

Proper Clip-On Weight Installation



Refer to this guide to help select the correct application. Test the fitment before install.



Place the weight on the rim flange. Ensure proper alignment.



Install using the proper hammer. Never use the wrong equipment. Be sure to wear proper PPE.




After installation, check fitment to ensure there is no movement.

Proper Adhesive Weight Installation



Clean the area where the wheel weight will be placed. Ensure there is no moisture residue.

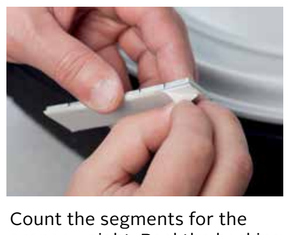

Count the segments for the proper weight. Peel the backing and prepare for install.



Install the weight with the center at the point of imbalance and work outwards.



Press firmly on all segments to ensure a tight bond.

Form 18027W - Copyright © all rights reserved.