

WALL MOUNT INSTRUCTIONS

- Complete kit should include 4 boxes (3 boxes labeled SPDRCK-A and 1 box labeled SPDRCK-B)
- Unpack all boxes to ensure a complete kit and familiarize yourself with all pieces
- ***Note: During wall mount installation, you will not use BOLT KIT, RACK FEET, RACK CROSS BRACE or ADHESIVE ROLL HOLDER. Each RACK UNIT will be mounted individually. <u>DO NOT</u> BOLT RACK UNITS TOGETHER WHEN WALL MOUNTING!***
- Before you begin, determine if you are going to mount your RACK UNITS horizontal (shown at top right) or vertical. Measure the wall to ensure proper fitment. Remember, do not bolt rack units together when wall mounting the unit vertically. Each rack unit will mount individually.
- For a complete kit, you should have received six (6) French cleat wall brackets (two for each hanging RACK UNIT)
- You will utilize the French cleat brackets on shelf 1 and shelf 3 of each RACK UNIT
- Using a level, proper wall anchors, washers and bolts; mount the brackets to a STUD in the wall or in a block wall. Mounting hardware should <u>EXCEED</u> a combined 160lb limit per RACK UNIT (40lb minimum per wall anchor)
- Once two brackets are mounted to the wall, you can slide the RACK UNIT into the slots of the french cleat design. At the end of each mounting bracket are two tabs that should be folded over using a pair of pliers to lock the RACK UNIT into place
- Once wall mounted, you can install HEADER CARD, RACK LABEL STRIPS and product boxes as shown on the others pages of this installation document

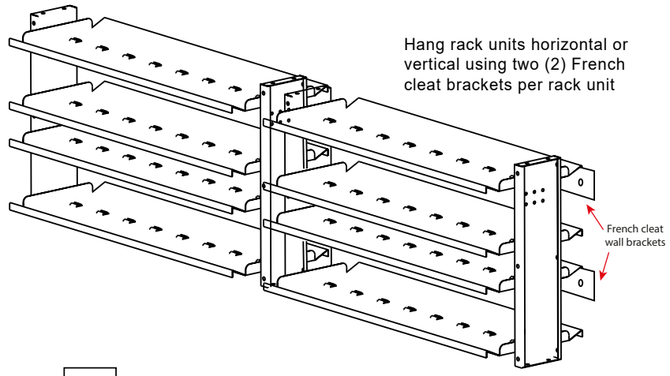

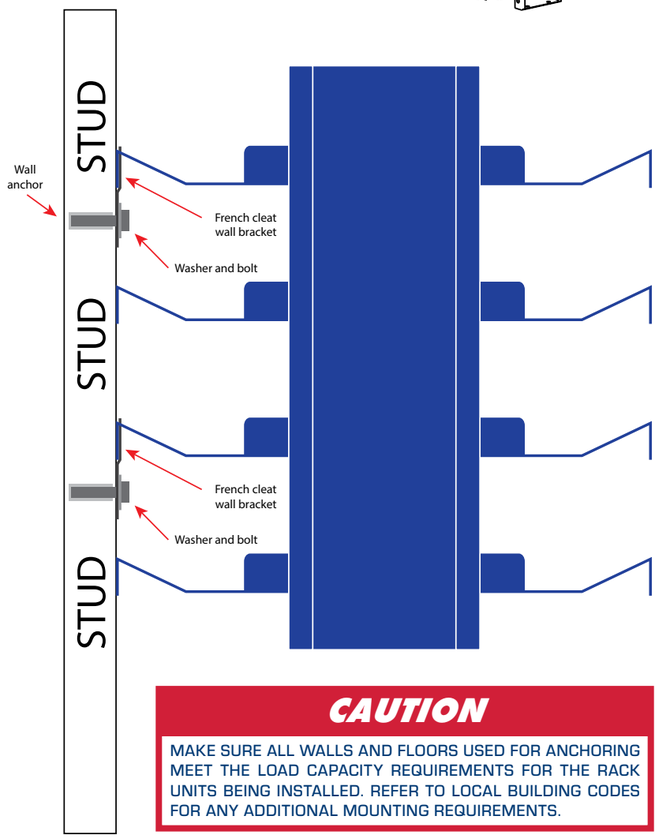

CAUTION

MAKE SURE ALL WALLS AND FLOORS USED FOR ANCHORING MEET THE LOAD CAPACITY REQUIREMENTS FOR THE RACK UNITS BEING INSTALLED. REFER TO LOCAL BUILDING CODES FOR ANY ADDITIONAL MOUNTING REQUIREMENTS.

Hofmann Power Weight SPEEDRACK Installation Instructions

WEGMANN automotive USA Inc.
1715 Joe B Jackson Parkway | Murfreesboro, TN 37127

Hofmann Power Weight is a brand of WEGMANN automotive.
All content © copyright 2018, WEGMANN automotive. All rights reserved.

QUESTIONS?
SERVICE FIRST LINE
1-888-215-4575
CONTACT CUSTOMER SERVICE

www.hofmann-powerweight.com


HOFMANN®
POWER WEIGHT

NEW

SPEEDRACK™

PREMIUM INVENTORY SOLUTION FOR WHEEL BALANCE WEIGHTS



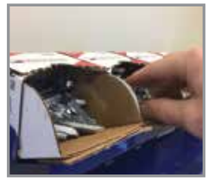

FRONT OPENING BOXES
Get a clean product receptacle every time you open the box. No more dirty, broken bins!



PULL THROUGH INVENTORY
When one box of weight is empty, simply pull it out and grab the box behind.



FRONT BAR CODES
When it is time to reorder, you can use a scanning tool to get products faster.



SIMPLE ROLL HOLDER
Follow the instructions on the roll box for how to insert it into the holder.

ADDITIONAL DETAILS:

- Full capacity holds 144 boxes of inventory
- No need for additional back-room inventory!
- Customizable label system, organize it your way
- Rack holds two 20 lb. rolls of adhesive weights
- Dimensions: 34” wide x 17” deep x 66” tall
- Ships in 4 boxes on a single pallet - easy install!

PRECAUTIONARY STATEMENTS

- **READ ALL INSTALLATION INSTRUCTIONS BEFORE STARTING INSTALLATION**
- Always wear safety glasses during installation process
- Use caution when handling sheet metal parts, edges could be sharp
- This installation will require at least two (2) people able to lift 50 lbs
- For any tools used in conjunction with this installation, please read, understand and follow all equipment instructions and safety requirements
- Do not overload SPEEDRACK shelves once properly installed
  - 480 total pounds (product & rack weight) for floor standing rack
  - 160 total pounds (product & rack weight) for individual wall mounted rack units
- FOR FLOOR MOUNTING, FLOOR BOLTS AND WALL ANCHORS MUST BE INSTALLED
- FOR WALL MOUNTING, BRACKETS MUST BE LEVEL AND SPACED APPROPRIATELY
- FOR WALL MOUNTING, ANCHORS/BOLTS MUST BE INSTALLED IN THE CENTER OF TWO STUDS OR INTO BLOCK WALLS. EACH ANCHOR MUST HOLD 40LBS MINIMUM
- Do not use this product in any manner other than what is described
- Do not sit on, stand on, hang on or pull on product once installed
- Do not alter, modify or otherwise structurally change the SPEEDRACK shelving unit or any of its component parts. Modification may cause failure
- The user and installer assumes all risk and responsibility for the proper installation and use of this product and for ensuring product is suitable for the intended application location. Failure to properly install may cause failure and damage
- WEGMANN AUTOMOTIVE DISCLAIMS ALL LIABILITY FOR DAMAGE OR INJURY RESULTING FROM IMPROPER INSTALLATION OR USE OF THE PRODUCT

CAUTION

MAKE SURE ALL WALLS AND FLOORS USED FOR ANCHORING MEET THE LOAD CAPACITY REQUIREMENTS FOR THE RACK UNITS BEING INSTALLED. REFER TO LOCAL BUILDING CODES FOR ANY ADDITIONAL MOUNTING REQUIREMENTS.

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN OVERTURNING OR COLLAPSE OF THE FIXTURE, RESULTING IN PERSONAL INJURY, PROPERTY DAMAGE OR DAMAGE TO THE PRODUCT ITSELF.

PARTS LIST

- Full SPEEDRACK consists of 4 boxes (3 boxes of SPDRCK-A and 1 box of SPDRCK-B)
- Each SPDRCK-A box consists of a single RACK UNIT
- Each SPDRCK-B box consists of all the accessories needed to complete the kit
  - 2 qty RACK CROSS BRACES
  - 2 qty RACK FEET
  - 6 qty RACK WALL BRACKETS (2 qty for each RACK UNIT)
  - 2 qty ADHESIVE ROLL HOLDERS
  - 1 qty HEADER CARD
  - 12 qty RACK LABEL STRIPS
  - 12 qty RACK LABELS
  - 1 qty Installation Instructions Document
  - Nuts, washers and bolts (2 sizes: small for rack cross braces, large for all other)
  - 2 qty wrenches to use to tighten nuts and bolts

FLOOR STANDING INSTRUCTIONS

- Complete kit should include 4 boxes (3 boxes labeled SPDRCK-A and 1 box labeled SPDRCK-B)
- Unpack all boxes to ensure a complete kit and familiarize yourself with all pieces
- *Note: During floor standing installation, only hand tighten all bolts until unit construction is complete, then go back and fully tighten all bolts using tools. This will help ensure unit is properly levelled upon completion*
- Place RACK UNIT #1 upside down and attach RACK FEET as shown to the right using the supplied hardware
- While unit still upside down, attach RACK CROSS BRACE using supplied hardware
- Place unit over on feet and attach RACK UNIT #2 and then RACK UNIT #3
- Now tighten all bolts using tools
- Slide the rack into its final position and (recommended) bolt to the floor using the FLOOR BOLT HOLES at the bottom of the rack and install the zip tie WALL ANCHOR to ensure stability and safety
- Install HEADER CARD using provided plastic inserts. Install the inserts onto the HEADER CARD first, then remove the tape backing and slide into the area located at the top of RACK UNIT #3
- Install ADHESIVE ROLL HOLDER by starting with the small angled end in a vertical position to place into one hole, then twist the holder to a horizontal position and slide towards you and then insert the other end into the other hole. Once a roll has been inserted into the holder, it will lock the holder into place
- Install RACK LABEL STRIPS by removing the tape backing and placing on each shelf facing. Once the strips are in location, then insert the individual labels into the holder (organize the weight labels depending on your needs - we recommend following the order shown on the header card)
- Install product boxes

